





Table of contents

overview3
function/icon description4
·
installation
- drilling template5
• .
- installation in.k455 with adhesive6
connections
- connecting in.k455 to the in.xm set up7
- connecting in.k455 directly to in.tune8
,
functions
functions
- on/off key9
- on/off key9
- on/off key9 - source key9
- on/off key







in.k455


Compact series of wired remote controls with display


In.k455 is an audio wired remote control for Aeware's in.tune am/fm receiver/cd player that features a large LCD display with easy to read characters, intuitive icons and 7 backlit raised keys.

This new series of audio-featured keypads comes in a waterproof plastic enclosure and can be integrated to Aeware's in.xm spa systems or connected to an in.tune stand-alone application.


Easy to install, in.k455 comes with a mini-din connector.




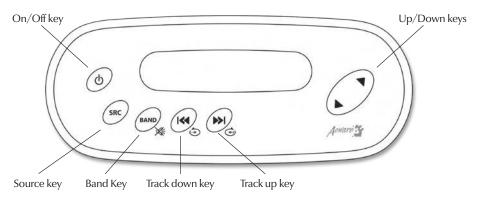

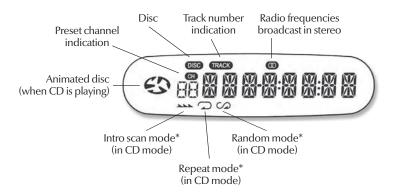

 ^{*} Option accessible through the in.tune only




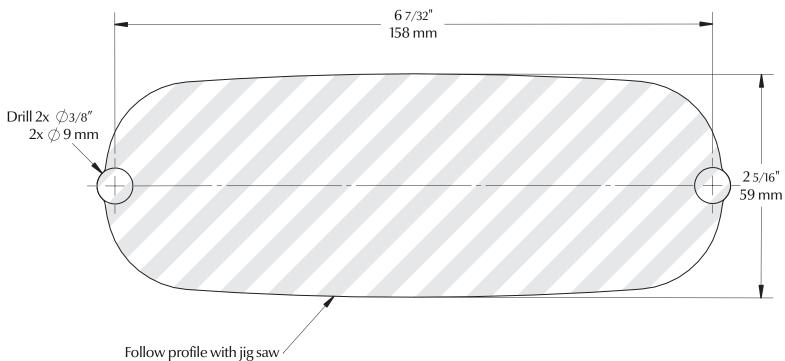


Installation in.k455 with adhesive


The keypad should be installed directly onto the spa (or very close to it) so that it is easily accessible to the user.

- Using the drilling template supplied with the unit, determine the mounting location and then stick the template on the location.
- Drill two 3/8" (9 mm) diameter holes at 6 7/32" (158 mm) from center to center, in the exact position according to the drilling template.
- Cut out and remove the material between the two holes following the profile with a jig saw (see illustration).
- Clean the installation surface and peel the adhesive gasket from the back of the keypad.
- Insert keypad and align it correctly, then secure it properly in place by using the two wing nuts provided.

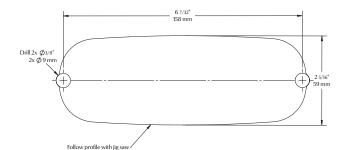

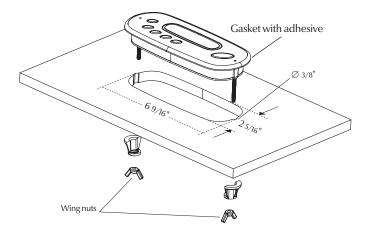


Connecting in.k455 keypad to the in.xm set up

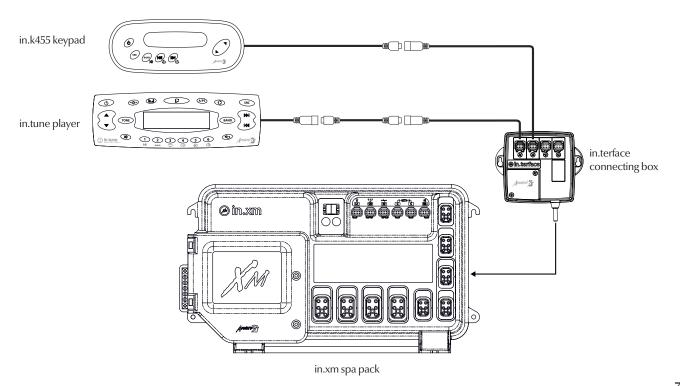


Connecting in.k455 keypad directly to in.tune

 The in.k455 keypad can be connected directly to the in.tune player.








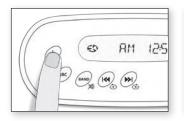


On/Off key (1)

 Press Power to turn unit On/Off.



Source key SRC

Select the source: (Tuner/CD/ CD Changer/AUX).

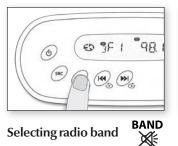

Selecting radio band

Press to select the BAND. Each time this button is pressed, the band changes between FM1, FM2, FM3, AM1, AM2, WB (WEATHER).

Press and hold the BAND key to mute the audio output. Press and hold it again to return to previous volume level.




Track down key

 
Radio mode: Quick press to skip to the previous memorized radio station (Preset Station).

CD mode: Quick press to skip to previous song.

CD Changer mode: Quick press to skip to the beginning of the song currently playing. Press and hold key to skip to the previous album.



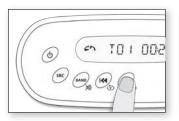





Track up key

Up/Down keys ▲ ▼

Radio mode: Quick press to skip to the next memorized radio station (Preset Station).


CD mode: Quick press to skip to next song.


CD Changer mode: Quick press to skip to next song. Press and hold key to skip to the next album.

Press Up or Down key to increase or decrease volume.



Dimensions:

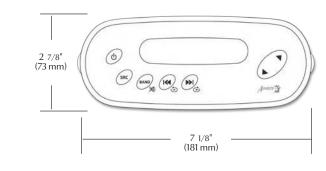

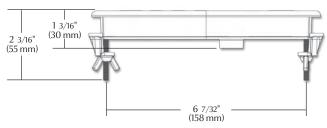

General specifications:

Environmentals:

Storage temperature: $70^{\circ}\text{C }(158^{\circ}\text{F}) \text{ to } -30^{\circ}\text{C }(-22^{\circ}\text{F})$ Operating temperature: $60^{\circ}\text{C }(140^{\circ}\text{F}) \text{ to } -20^{\circ}\text{C }(-4^{\circ}\text{F})$ Humidity: up to 95% condensing

Mechanical Specs:

Weight: 0.52 kg (1.2 lbs)

Dimensions (W x H x D): Front Panel:

181 mm x 73 mm x 55 mm

 $(7\ 1/8" \times 2\ 7/8" \times 2\ 3/16")$ Soft gasket

Standards: UL 1563 Fifth Ed. File: E182156

CSA No. 22.2 - 218.1-M89

