

Quick Start Card
in.ye-6™ North American version

1- Connect all outputs & keypads

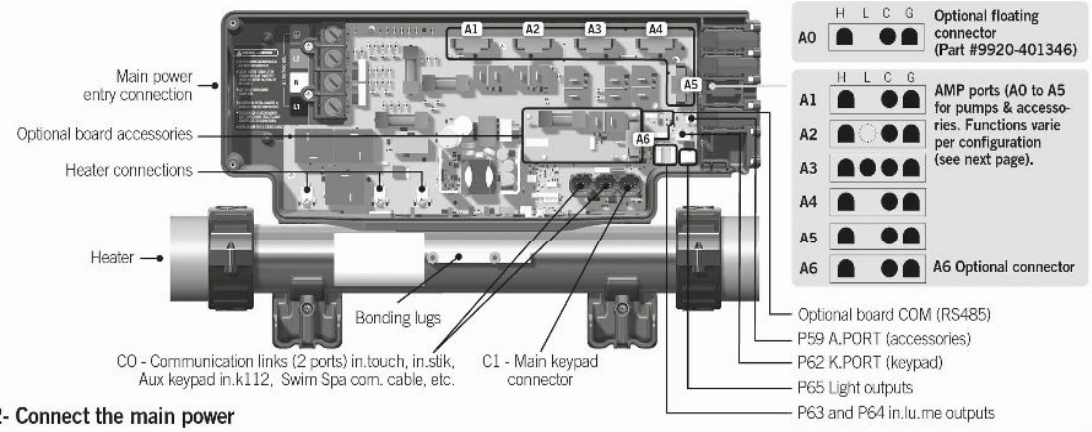


2- Connect the main power

2.a- Electrical wiring

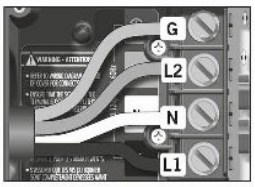

For 240 V (4 wires)


Connect wiring of the electrical service box GFCI. Neutral wire is mandatory.

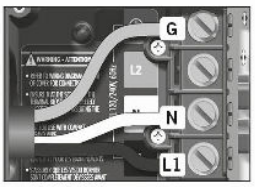

For 120 V (*3 wires)


* If connected to a 3 wire system, any 240 V components will not work.

2.b- Heater & pump/accessories voltage

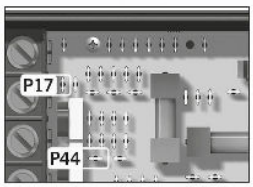

Heater voltage

Verify BROWN common wire connection to tab:
P17 - 240 V
P44 - 120 V

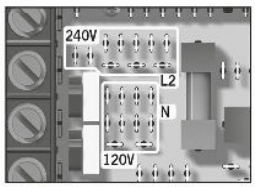


Pumps & accessories voltage

Verify each WHITE common wire connection to tab:
N - 120 V
L2 - 240 V pump/acc.

WARNING! All connections must be made by a qualified electrician in accordance with the national electrical code and any state, provincial or local electrical code in effect at the time of the installation. This product must always be connected to circuit protected by a Ground Fault Circuit Interrupter (GFCI).

3- Select spa configuration (if prompt on startup)

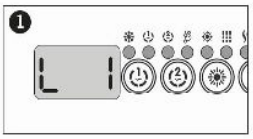

At first startup the keypad display will show **Lx** or **LLx**, where « x » representing the config. number. Some spa packs come with a pre-selected config. and you may skip this step if your system automatically starts up[1].



Use the **Up/Down** key to choose the new low level configuration number.



Press the **Program**[2] key to confirm the selection.

For more information, see our website: www.geckoalliance.com

[1] **Note: To re-enter the low level selection menu, hold the Pump 1 key for 30 seconds.**

Note: For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose the appropriate Low level.

[2] **Note: If the keypad does not have a Program or Filter key, use the Light key instead.**

4- Select breaker current



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

Note: For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose Input current.



The values displayed by the system correspond to **80%** of the maximum amperage capacity of the GFCI.

For more information, see our website: www.geckoalliance.com

GFCI	b
60 A	48 A
50 A	40 A
40 A	32 A
30 A	24 A
20 A	16 A
15 A	12 A

(10 to 20 A dedicated to 120 V)



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

Note: If the keypad does not have the **Program** or **Filter** key, use the **Light** key instead.

Pack description:			IN.YE-3-H4.0-AMP-V3FLX-DY1
Pack #:	0610-221143-748	Revision: 5	
Spec. :		Revision: 5	

How to use

Pump 1 - 5	Blower, DIRECT 1 - 2	Circ. Pump (CP) configuration	Ozone (O3) configuration	Filter cycle daily	Heater	
Pump speed	X = Installed	During filter cycle or Always on	During filter cycle or Always on, With CP or P1	Frequency * Duration		
(Connector) *Current defined Hi-Lo*	(Connector) *Current defined*	(Connector) *Current defined*	(Connector) *Current defined*	(Pump used)	(Pump used) *Current (Power) defined*	

5- Select low level

QSC description:		QSC IN.YT V2FLX	
QSC #:	9919-101823	Revision:	
Software:	748	Revision:	5

Configuration selection chart

Standard config. #	Pump 1	Pump 2	Pump 3	Pump 4	Pump 5	Blower	DIRECT 1	DIRECT 2	Circ. Pump (CP) configuration	Ozone (O3) configuration[1]	Filter cycle daily	Heater
1	2SP (A3) *8A-3A*						X (A5) *0A*			During filter cycle (A1)	2 X 2 hours with P1	with P1 *17A*
2	2SP (A3) *8A-3A*						X (A5) *0A*		On when filtering (A1) *1A*	On when filtering (A1) *0A*	2 X 12 hours with CP	with CP *17A*
3	2SP (A3) *8A-3A*	1SP (A1) *8A*					X (A5) *0A*			on when with P1 Low (A2) *0A*	2 X 2 hours with P1	with P1 *17A*
5	2SP (A3) *12A-4A*									During filter cycle (A1) *0A*	2 X 2 hours with P1	with P1 *23A*

Dual pack config. #	Pump 1	Pump 2	Pump 3	Pump 4	Pump 5	Blower	DIRECT 1	DIRECT 2	Circ. Pump (CP) configuration	Ozone (O3) configuration[1]	Filter cycle daily	Heater
10 110	2SP (A3) 12A-4A						X (A5) 0A			On when filtering (A1) 0A	2 X 2 hours with P1	with P1

Glossary	
(P1L)	Pump 1 Low speed
(CP)	Circulation Pump
X	Installed
1SP	High speed only
2SP	High and Low speed
(OUT, AMP, Relay, Tab)	Output connector
13A-4A	Current High - Low speed

Note	
1	When the Ozonator is not controlled by a relay, it can be tied to Pump 1 Low speed or Circ. Pump. using cable 9920-401369.
2	17A (4.0kW)

All trademarks or registered trademarks are the property of their respective owners.
© Groupe Gecko Alliance Inc., 2025