
Quick Start Card

in.yj-3-V3-ce-2PC™ European version


1- Connect all outputs & keypads

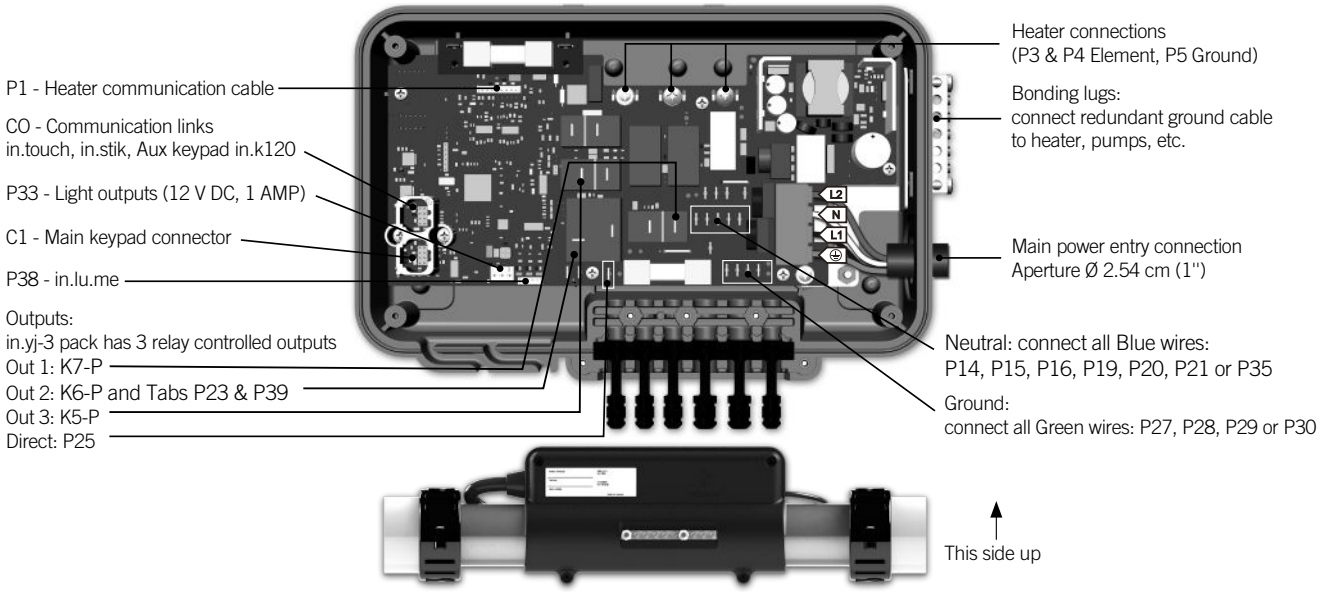

68,1 L/min (18 GPM) minimum water flow required.

2- Connect the main power


2.a- Electrical wiring

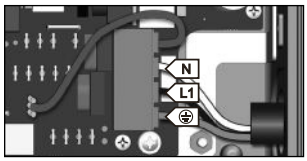

220 V - 240 V, 50HZ (3 wires)

DO NOT REMOVE THE BROWN WIRE. Insert each wire into the appropriate socket of the main terminal block according to the color code indicated on the sticker. Use a flat screwdriver to tighten the screws on the terminal.

2.b- Pump & accessory voltage

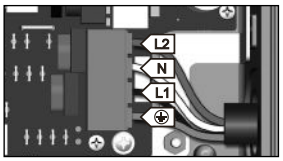


220 V - 240 V, 50HZ (4 wires)

Remove and discard brown wire and insert each wire into the appropriate socket of the main terminal block according to the color code indicated on the sticker. Use a flat screwdriver to tighten the screws on the terminal.


WARNING!

in.yj.ce models must always be connected to a circuit protected by a Residual-Current Device (RCD) having a rated operating residual-current not exceeding 30 mA. Correct wiring of the electrical service box, RCD, and pack terminal block is essential! Check your electrical code for local regulations. Only copper wire should be used, never aluminum.


3- Select spa configuration (see back page)

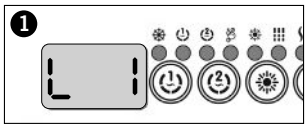

At first startup the keypad display will show **L 1** or **LL 1**.

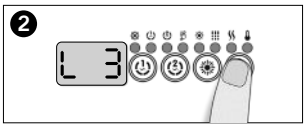

Use the **Up/Down** key to choose the new Low level configuration number.

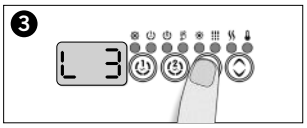

Press the **Program** key to confirm the selection.

For more information, see our website: www.geckoalliance.com

Note: To re-enter the Low level selection menu, hold the Pump 1 key for 30 seconds.

Note: If the keypad does not have a **Program** or **Filter** key, use the **Light** key instead.

Note: For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose the appropriate Low level.


4- Select breaker current

Specify the current rating and the number of phases of the RCD used to ensure safe and efficient current mangement (and no RCD trippings).



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

Note: For the **Color keypad series**, select **Settings menu**, go into **Electrical config** and choose Input current.

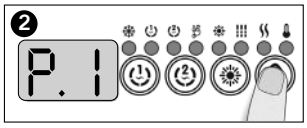

Current setting for each phase setting

# of phases	Current setting range
1	10 to 40 A
2	10 to 20 A

Choose the number of phases supplying your spa (1-2). Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.



The values displayed by the system correspond to the maximum amperage capacity of the RCD.

For more information, see our website: www.geckoalliance.com



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

Note: If the keypad does not have the **Program** or **Filter** key, use the **Light** key instead.

Configuration selection chart

Software #593, rev. 003

Information between ( ) indicates which connector/tab to use. See drawing from Step 1 for connector position.

Standard config. #	Pump 1	Pump 2	Blower	Circ. Pump (CP) configuration	Ozone (O3) configuration	Filter cycle daily	Heater
1	**2SP** (K7-P, K6-P) *10A-2A*	_	_	**On when filtering** (K5-P) *1A*	**On when filtering** (K5-P) *0A*	**2 X 12 hours** With CP	With CP *3kW*
2	**2SP** (K7-P, K6-P) *10A-2A*	_	_	_	**On when filtering** (P23, P39) *0A*	**2 X 1 hour** With P1	Pump 1 *3kW*
3	**2SP** (K7-P, K6-P) *10A-2A*	_	_	**On when filtering** (K5-P) *1A*	**On when filtering** (K5-P) *0A*	**2 X 12 hours** With CP	With CP *1.3kW*
4	**2SP** (K7-P, K6-P) *10A-2A*	_	_	_	**On when filtering** (P23, P39) *0A*	**2 X 1 hour** With P1	Pump 1 *1.3kW*
5	**2SP** (K7-P, K6-P) *10A-2A*	_	_	**On when filtering** (K5-P) *1A*	**On when filtering** (K5-P) *0A*	**2 X 10 hours** With CP	With CP *3kW*
6	**2SP** (K7-P, K6-P) *10A-2A*	_	_	**On when filtering** (K5-P) *1A*	**On when filtering** (K5-P) *0A*	**2 X 10 hours** With CP	With CP *1.3kW*

Glossary

X	Installed
1SP	High speed only
2SP	High and low speed
10A, 10A-3A	Output current: single speed (1SP) or dual speed High-Low (2SP)

For complete TechBook or more information, see our website: www.geckoalliance.com

© Groupe Gecko Alliance Inc., 2023
All trademarks or registered trademarks are the property of their respective owners.