



Your Dynamic Jet Sequencer controls 4 jet sets in your spa's "hot seat". This **Quick Reference Card** provides a quick overview of your jet sequencer's main functions and the operations accessible with your DJS-1 keypad.



To start your sequencer:

Press **on/off** key to turn sequencer on. The system will then perform an indicator light test and open all valves. Pressing a second time will turn sequencer off. A built-in timer automatically turns sequencer off after 2 hours, unless manually deactivated first.

Note: If the DJS-1 is installed in a spa using a Gecko Electronics' spa pack or is equipped with an optional pressure switch, the DJS-1 will go on by itself whenever the pump is turned on.



To select and preview a sequence:

Press sequences key to select one of the 7 preprogrammed massage sequences. Note that only the first 6 sequences have corresponding indicator lights. The 7th sequence, where all valves are opened at the same time, does not have an indicator light. A preview of the massage is displayed for 5 seconds after selecting a sequence.



To change sequence speed:


Press **speed** key to change the time interval between each step of the selected massage sequence:


Speed 1: 15 seconds between each step.
Speed 2: 10 seconds between each step.
Speed 3: 5 seconds between each step.
The corresponding indicator light flashes to reflect the selected speed.



To pause a massage sequence:

Press **pause** key to interrupt a massage sequence and prolong the action of a jet set (or a combination of sets). Pressing a second time will resume the massage sequence. The "Pause" indicator light will be on in Pause mode.

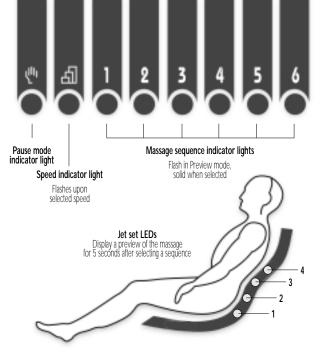

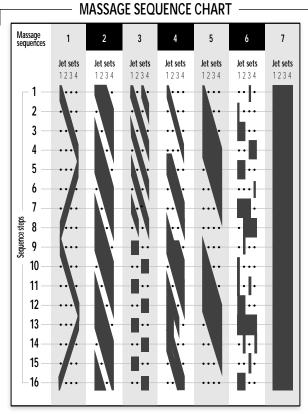

Legend:

- Closed jets
- Active jets

