



# Quick Reference Card

## in.temp

A new way to regulate the water of your spa



Plug and play solution

---

Benefit from energy savings

---

A total flexibility that can also  
cool down water





## Connections



Turn off power before connecting the in.temp to the spa control system.


### System connection

The communication cable provided with the heat pump must be connected to the RS485 communication port of the spa control. The power cable connects to the spa control using 6,35 mm (0,250") quick connect female terminals. Ensure that all female terminals are correctly and completely seated on the printed circuit terminals for proper current ratings. The connection must be done according to the following tables:

#### in.ye-V3 control system

CE Model	
Brown	Main line P45, P46, P47 tab (F2)
Blue	Any Neutral (N) tab
Green/Yellow	Any Ground (G) tab


NA* Model	
Black	P49, P50 tab (F1)
White	Any Line 2 (L2) tab
Green	Any Ground (G) tab

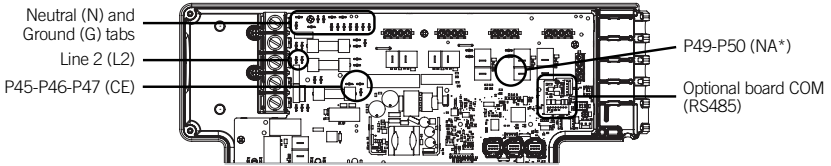

#### in.ye control system

CE Model	
Brown	Main line P28, P30 or P32 tab (F2)
Blue	Any Neutral (N) tab
Green/Yellow	Any Ground (G) tab


NA* Model	
Black	Main line P31, P33 or P36 tab (F3)
White	Any Line 2 (L2) tab
Green	Any Ground (G) tab

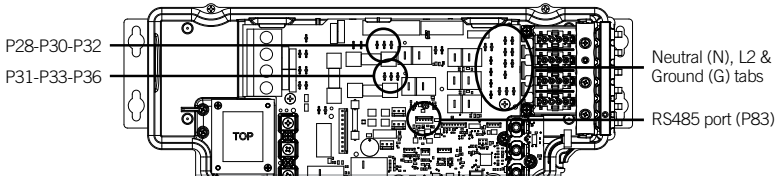


### Terminal box

The terminal box is located behind the terminal cover and allows access to the communication and power connections.

Signal	220 V~240 V, 50 Hz	12V	RS-485
Terminal ID	L N ⊕	+ -	B A
Wire color	Brown Blue Green/Yellow	Red Black	Green White

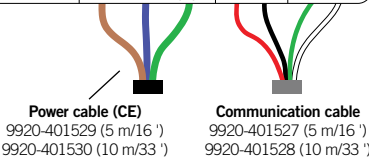

Signal	240 V ± 5%, 60 Hz	12V	RS-485
Terminal ID	L N ⊕	+ -	B A
Wire color	Black White Green	Red Black	Green White

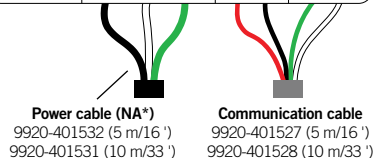

\*North American



---

## Installation

For plumbing and installation diagrams, refer to the links below depending on the final destination of the product.

### USA Installation Only



[bit.ly/intemp-usa](https://bit.ly/intemp-usa)

### International Installation



[bit.ly/intemp-international](https://bit.ly/intemp-international)

---

## Operating modes

### Eco Heat (EcoH)

In this mode, the in.temp is used as the unique source of heating. The heating element is kept off and the in.temp is not used to cool the water should its temperature rise above the current set point.

### Smart Heat (HEAT)

This mode uses the in.temp as the main heating source. The heating element is turned on only if there is a large temperature difference between the water and the set point. The in.temp is not used to cool the water in this mode.

### Cool (COOL)

This mode uses the in.temp in cooling mode only. The in.temp is not used as a heating source and the heating element is never activated.

### Eco Auto (AUTO)

This mode borrows functionality from both Eco Heat and Cool modes and has the ability to select the proper Heat or Cool mode automatically according to the water temperature. The heating element is never activated in this mode.

### Smart Auto (SMRT)

This mode borrows functionality from both Smart Heat and Cool modes and has the ability to select the proper Heat or Cool mode automatically according to the water temperature. The heating element is activated only if there is a large temperature difference between the water and the set point.

### Electric (ELEC)

This mode keeps the heat pump off and uses only the heating element to regulate water temperature.

---



## Troubleshooting

### Error codes

If a protection kicks in or if an error is detected in the heat pump, an error code will be reported on the spa keypad. If more than one error is detected, only the error with the highest priority will be displayed.

All error codes are listed below in priority order.

Error code	Error description
HP99	Communication error
HP05	Coil temperature sensor failure
HP18	Water outlet temperature sensor failure
HP42	Compressor high pressure protection
HP46	Compressor low pressure protection
HP41	Water flow protection
HP01	Compressor exhaust temperature sensor failure
HP19	Water inlet temperature sensor failure
HP09	Compressor return gas temperature failure
HP22	Ambient temperature sensor failure
HP65	Ambient temperature too low protection
HP55	Water inlet/outlet temperature difference protection
HP51	Compressor exhaust temperature too high protection
HP63	Water outlet temperature too low protection when defrosting
HP56	Water outlet too cold for cooling

### Specifications

<b>CE models</b>	<b>5kW (Part # 0615-807002)</b>	<b>7.5kW (Part # 0615-807003)</b>
<b>Minimum flow rate:</b>	1,14 M <sup>3</sup> /h (5 GPM)	1,14 M <sup>3</sup> /h (5 GPM)
<b>Best efficiency flow rate:</b>	2,27 M <sup>3</sup> /h (10 GPM)	3,41 M <sup>3</sup> /h (15 GPM)
<b>NA* models</b>	<b>5kW (Part # 0615-807000)</b>	<b>7.5kW (Part # 0615-807001)</b>
<b>Minimum flow rate:</b>	1,14 M <sup>3</sup> /h (5 GPM)	1,14 M <sup>3</sup> /h (5 GPM)
<b>Best efficiency flow rate:</b>	2,27 M <sup>3</sup> /h (10 GPM)	3,41 M <sup>3</sup> /h (15 GPM)

\* North American

For complete TechBook or more information, see: [www.geckoalliance.com](http://www.geckoalliance.com)

